


1. Overview

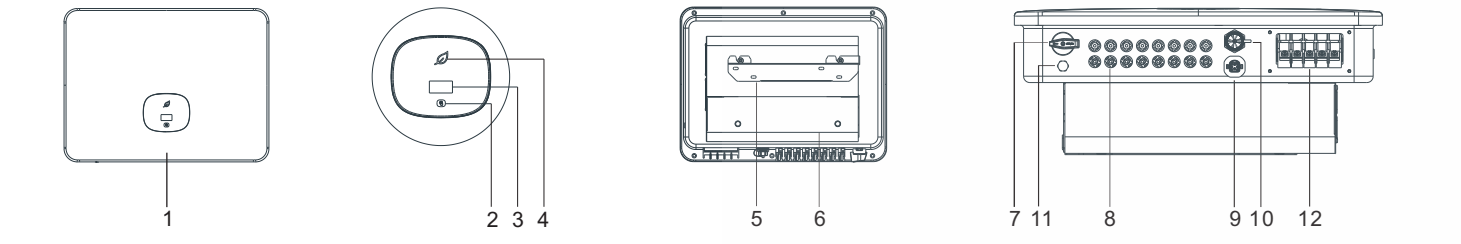

(1)Front panel

(2)Touch button

(3)LCD screen

(4)LED indicator

(5)Mounting bracket

(6)Heat sink

(7)DC switch

(8)PV terminal

(9)RS485 port

(10)USB port

(11)Vent valve

(12)AC terminal


**Note:**

1.This document is for quick installation guidance only, please refer to User Manual for more details.


2. Growatt shall not be liable for any damage resulting from unproper installation.

2. Installation


System overview

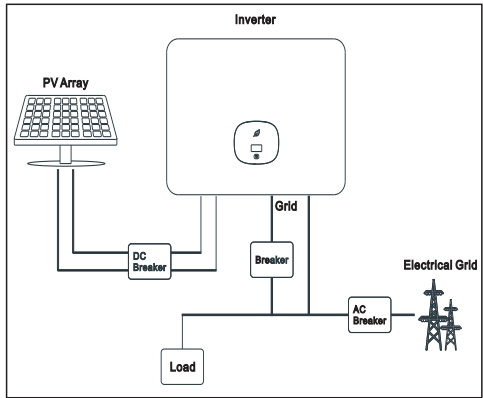

2.1 Installation requirements

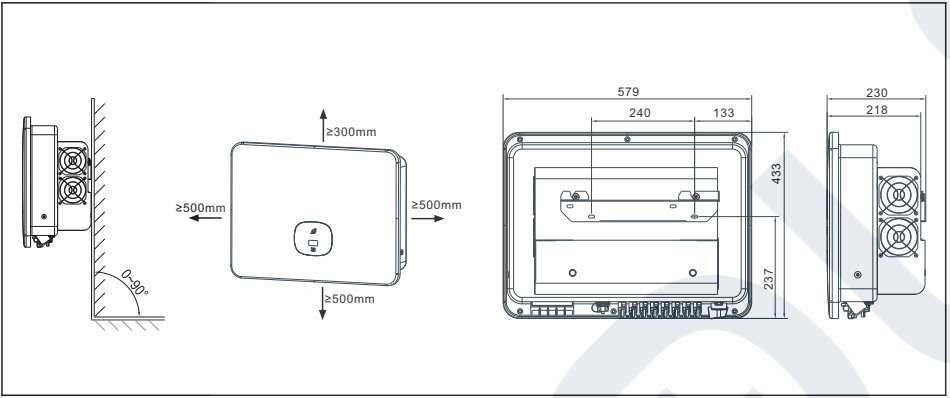


2.2 Wall mounting

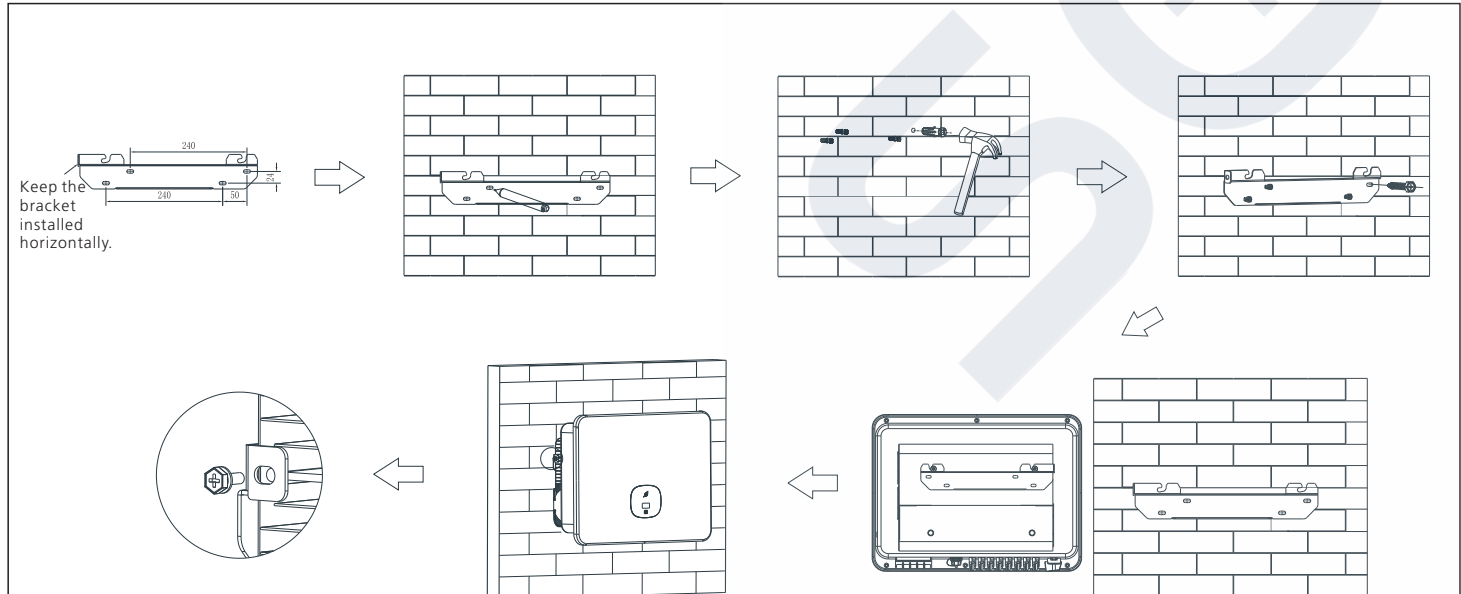

**Note:**

1. When drilling holes in the wall, avoid water and electricity pipes, otherwise it may cause danger.

2.3 Communication module installation

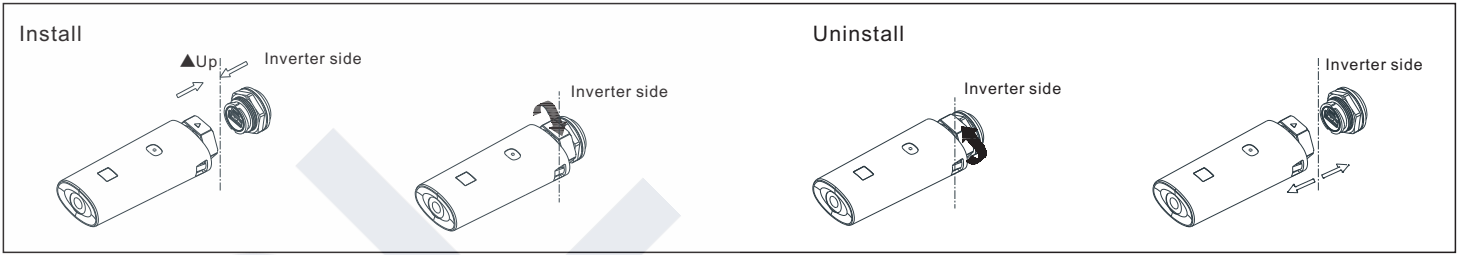

3. Electrical connection

Please prepare the cable before connecting as follows.


No.	Cable name	Type	Recommend model
1	Protective grounding wire	Single multi-core yellow-green wire	16mm <sup>2</sup> - 20mm <sup>2</sup>
2	AC output wire	four or five polychromatic multi-core copper wires	16mm <sup>2</sup> - 20mm <sup>2</sup>
3	PV input wire	PV wire (such as PV1-F)	4mm <sup>2</sup> - 6mm <sup>2</sup>
4	Communication wire	RS485	/

**Note:**


1. Please make sure all switches are in "OFF" position before wiring. For personal safety, please do not operate with electricity.

2. If the diameter of the cable does not match the terminal, or the cable is aluminum wire, please contact our after-sales personnel.

3.1 Grounding

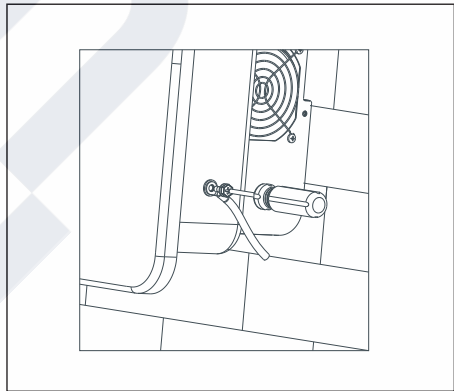


3.2 AC output connection

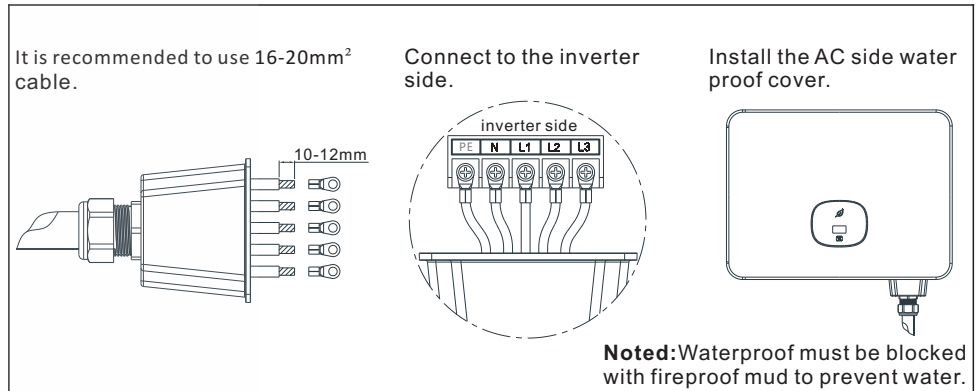

3.3 DC connection

3.3.1 PV input terminal installation

1

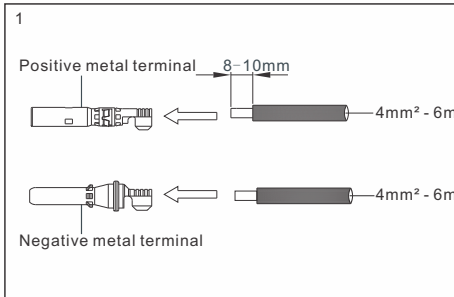


Positive metal terminal

8-10mm

4mm<sup>2</sup> - 6mm<sup>2</sup>


Negative metal terminal

2

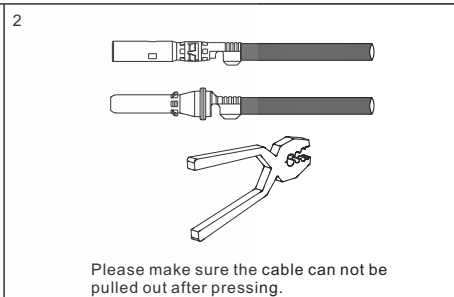

Please make sure the cable can not be pulled out after pressing.


3

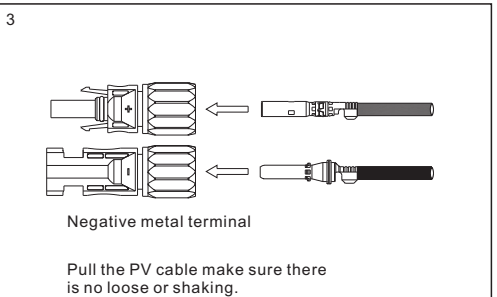

Negative metal terminal

Pull the PV cable make sure there is no loose or shaking.


4

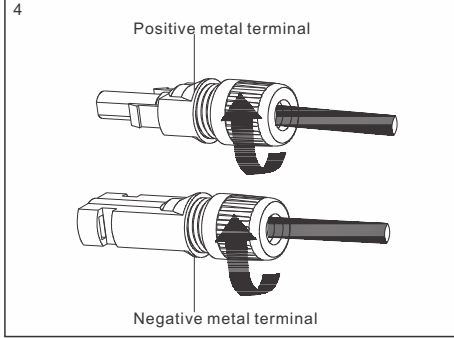

Positive metal terminal

Negative metal terminal


5

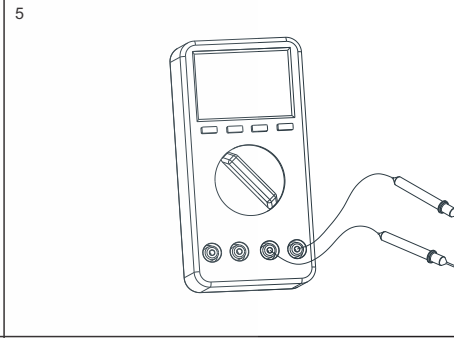


Make sure the cable polarity is correct and voltage is less than 1100V.

3.3.2 Plug in PV terminal

1

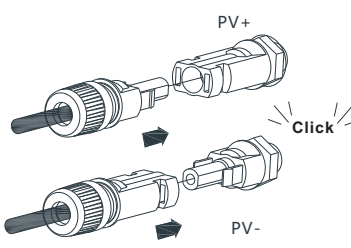

2

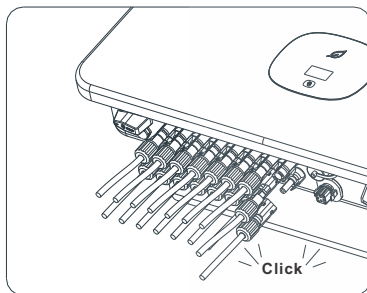


**Note:**

1.Before installing the PV terminal, please double-check that the PV input voltage and current do not exceed the MPPT limits.


2.When installing the PV terminal, pay attention to the difference between the positive and negative poles and the one-to-one correspondence between the terminals and the machine.

3.There is a "click" sound when the terminal is connected,please gently pulling the PV wire to make sure there is no loose or pulling off.

3.3.3 Communication cable installation

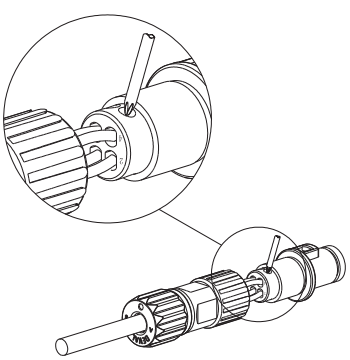


No.	Description	Remarks
1	RS485A1	RS485 communication signal
2	RS485B1	
3	RS485A2	Anti-backflow metter
4	RS485B2	RS485 signal

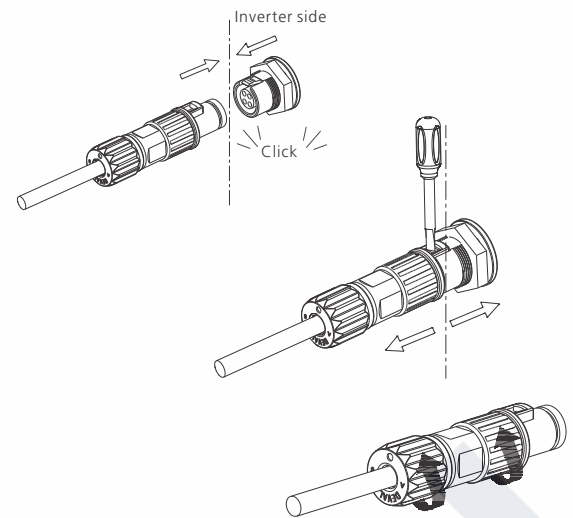

4. Connecting Meter

The following table describes how we can connect EASTRON meter (TPM-E)to inverter:

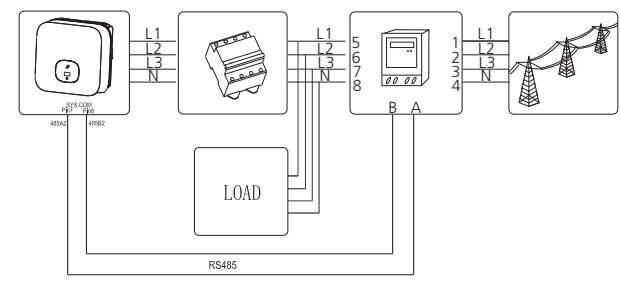

Meter Pin NO.	Description	Meter Connection
1/2/3/4	L1/L2/L3/N-in	Grid L1/L2/L3/N
5/6/7/8	L1/L2/L3/ N-out	AC connector & Load L1/L2/L3/N
A	RS485A	SYS COM Pin 7 RS485A2
B	RS485B	SYS COM Pin 8 RS485B2

5. Post-installation check

No.	Acceptance criteria	No.	Acceptance criteria
1	The inverter is installed correctly, firmly and reliably.	6	The RS485 communication cable is installed correctly and firmly.
2	The ground wire connected well and the connection is firm and reliable.	7	The cable tie port is trimmed well without leaving sharp corners,meets the requirements of the user.
3	All switches are in the OFF state.	8	All exposed terminals are well protected and there are no vacant ports.
4	All wiring is correct and securely connected.	9	Pay attention to clean up all construction residues.
5	The wiring of the cable is reasonable, meets the requirements, and there is no phenomenon of broken skin.		

6. Power on and off steps

**⚠Note:**

Before turning the inverter on, please make sure the PV input voltage and current are within the MPPT limits.



Follow the steps below to turn the inverter on:

1. Switch on the build-in DC isolator at the bottom of the inverter.
2. Switch on the PV Array and DC isolator next to your inverter, if you can not find this switch, skip this step.
3. Switch on the Solar AC isolator if the inverter is more than 3 meters away from your switchboard.
4. Switch on the solar supply main switch in the switch board.

To shut down your system, follow this guide in reverse order.

7. Status of PV grid inverter

Customer can read more information by push button.

Mark	Describe	Explain	
	Touch mark	Single touch	Switch the display interface or the current number plus 1
		Double touch	Enter the setting state or confirm
		Triple touch	Return to the previous display interface
		Long press for 5s	The current data returns to the default value
	Inverter status indicator	Red	Fault
		Green	Normal operation
		Red light flashing	Warning
		It can display the basic information of inverter through LCD display screen (PV/AC voltage,PV power,AC current,total power,generating capacity, etc.).	

8. Export limitation setting

Set parameter

General  
Advanced

Password  
123

Exporlimit  
OFF ON

Meter  
CT

ExportLimit Rate  
XXX.X%

Set OK

If the local grid company requires to limit the output power from your inverter systems,we introduce the concept of Export Limit Rate.The ratio of your system output power divided by the rated power of the inverter is called Export Limited Rate.For example,if the local grid companyonly accepts 4kW from your 5kW system,then the Export Limit Rate of 5kW inverter should be 80%.

9. Service and contact



SOLSOL s.r.o.

Králova 298/4, Brno, 616 00, Czech Republic

podpora@solsol.cz

www.solsol.cz

Shenzhen Growatt New Energy CO.,LTD

4-13/F,Building A,Sino-German(Europe) Industrial Park, Hangcheng Ave, Bao'an District, Shenzhen, China

T +86 0755 2747 1942

E service@ginverter.com

W www.ginverter.com





Download Manual

Growatt New Energy

GR-UM-211-A-02